

Info Sheet INFO 108.E-ed.D

Date of issue: 01/06/11

Replaces version from: 01/09/06

Page 1/1

ACTIVATING A PRECI-BAR RIDER

- 1. Use a broad blade of an instrument and carefully press this between the uncovered parts of the rider and the acrylic resin.
- 2. Both sides of the rider must be evenly activated.
- 3. Check if adequate retention has been attained.